


SEAT HEATER SWITCH

COMPONENTS


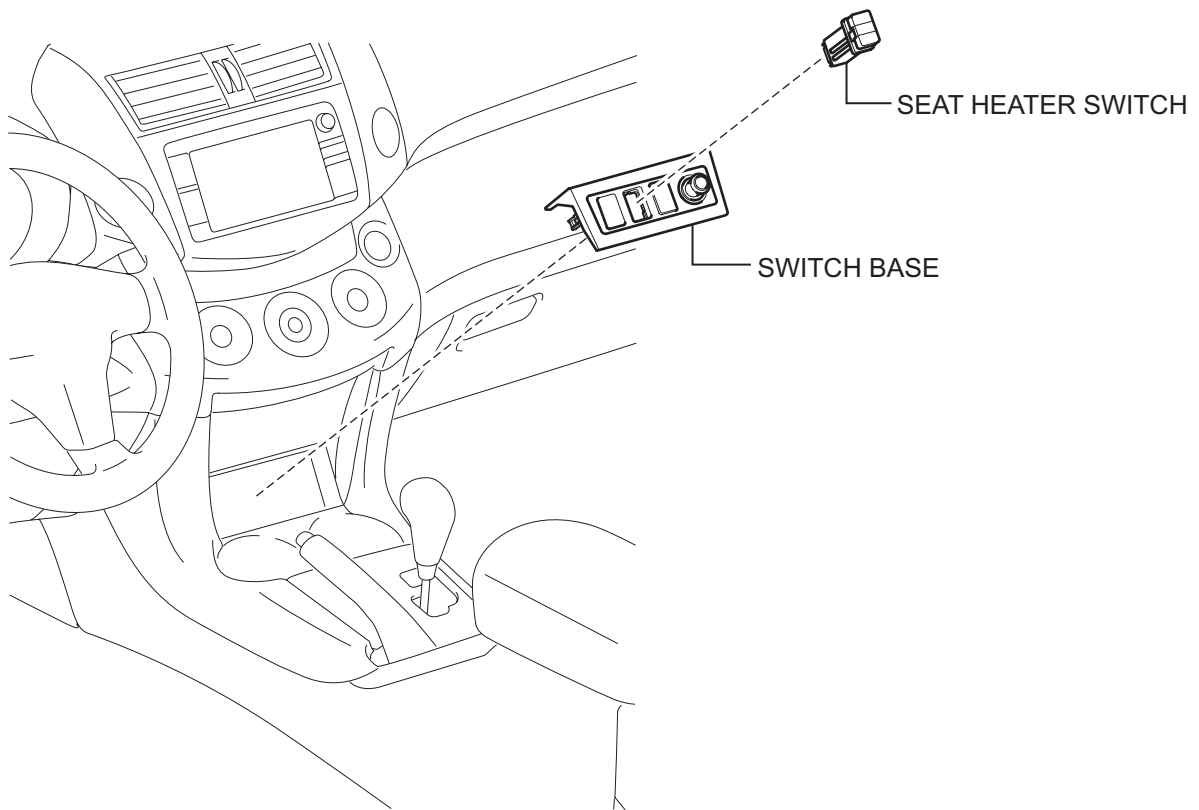


SE

SE

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
- CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. REMOVE SWITCH BASE (See page IP-18)
3. REMOVE SEAT HEATER SWITCH
- (a) Using a screwdriver, detach the 2 claws and remove the switch.
- HINT:
Tape the screwdriver tip before use.

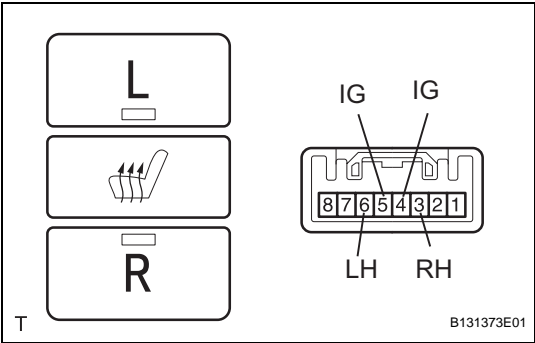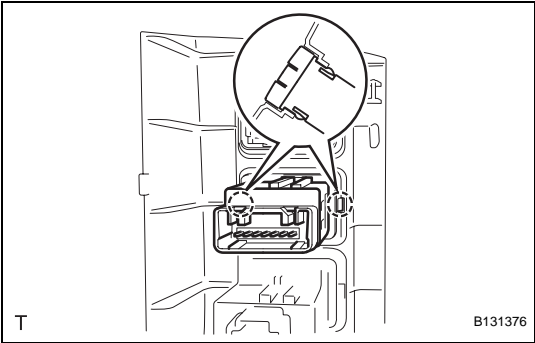

INSPECTION

1. INSPECT SEAT HEATER SWITCH
- (a) Measure the resistance of the seat heater switch when the switch is operated.

Standard resistance
for LH

Tester Connection	Switch Condition	Specified Condition
5 (IG) - 6 (LH)	ON	Below 1 Ω
5 (IG) - 6 (LH)	OFF	10 kΩ or higher

for RH

Tester Connection	Switch Condition	Specified Condition
4 (IG) - 3 (RH)	ON	Below 1 Ω
4 (IG) - 3 (RH)	OFF	10 kΩ or higher

If the result is not as specified, replace the switch.

- (b) Check that the seat heater switch indicator light illuminates when the switch is operated.


OK
for LH


Measurement Connection	Switch Condition	Specified Condition
Battery positive (+) → 5 (IG) Battery negative (-) → 2 (E)	ON	Illuminates

for RH

Measurement Connection	Switch Condition	Specified Condition
Battery positive (+) → 4 (IG) Battery negative (-) → 2 (E)	ON	Illuminates

If the result is not as specified, replace the switch.

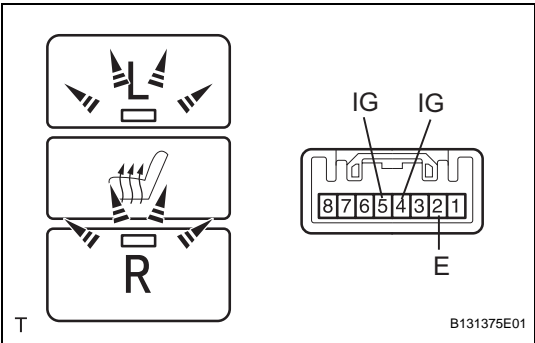


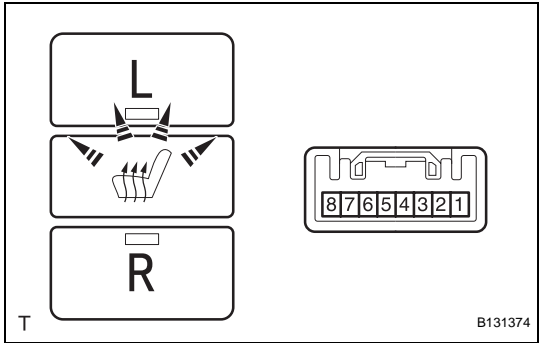

- (c) Check that the seat heater switch illuminates.
OK

Measurement Connection	Switch Condition	Specified Condition
Battery positive (+) → 7 Battery negative (-) → 8	Always	Illuminates

If the result is not as specified, replace the switch.

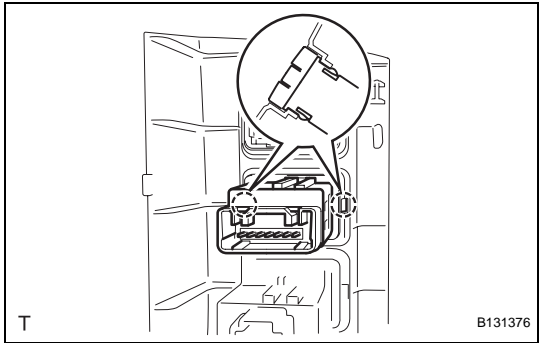

INSTALLATION

- 1. INSTALL SEAT HEATER SWITCH**
(a) Attach the 2 claws to install the switch.
- 2. INSTALL SWITCH BASE (See page [IP-27](#))**
- 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**